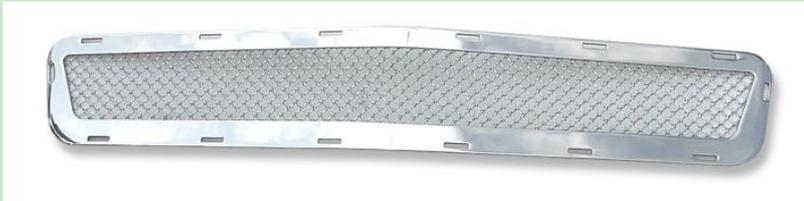


Part#	GR03GFG81T	Application	<b>08~10 Chevy Malibu – Low Bumper Mesh Grille</b>					
-------	------------	-------------	--	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel				

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
------	-------------	--------------

1	Identify the grille & hardware with parts list.	
---	---	--

2	Remove the plastic push clips from the top side of the front fascia and the plastic filler panel. Figure 1	
---	--	--

3	Remove all of the small bolts from the top side of the front fascia and the plastic filler panel. Figure 2	
---	--	--

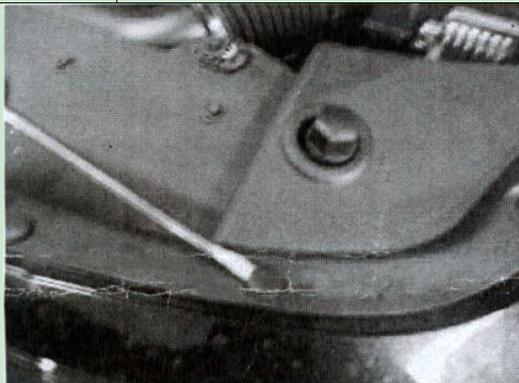


Figure 1

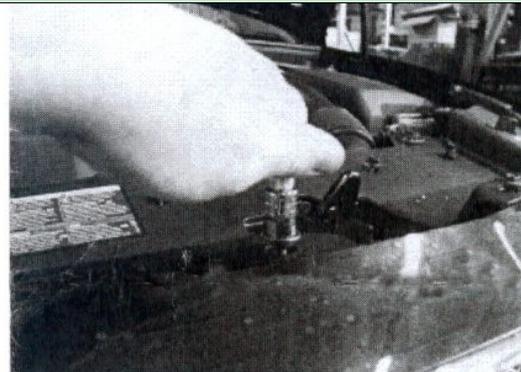


Figure 2

4	Once all of the clips and bolts are removed it is now time to remove the plastic filler panel.	
---	--	--

5	Remove the small bolts and clips that attach the inner wheel well panel to the edge of the front fascia.	
---	--	--

6	When the inner wheel well panel is free from the front fascia remove the 10mm bolts from each side of the fascia. Figure 3	
---	--	--

7	Remove the small bolts that attach the lower filler panel from the bottom side of the front fascia.	
---	---	--

8	Gently release each side of the front fascia from the vehicle by pulling on the side of the front fascia near the fender. Figure 4	
---	--	--

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFG81T	Application	<b>08~10 Chevy Malibu – Low Bumper Mesh Grille</b>
-------	------------	-------------	--



Figure 3



Figure 4

9	Release the upper section of the front fascia by gently pulling up on the section near the fender and the headlight. Figure 5
10	When the front fascia is completely released from the vehicle and all of the fasteners are removed it is now time to remove the fascia from the vehicle. If your vehicle is equipped with fog lights they will need to be disconnected before you can remove the fascia.
11	Place the front fascia on a soft sheet or blanket to prevent scratching during the installation.
12	If your vehicle is equipped with a front license plate mount it will need to be removed to complete the installation. It can be reattached after the grille is installed and just before the fascia installed onto the vehicle.
13	Unclip the inner bumper support from the front fascia and remove. Set the inner bumper support aside as it will be reused later. Figure 6

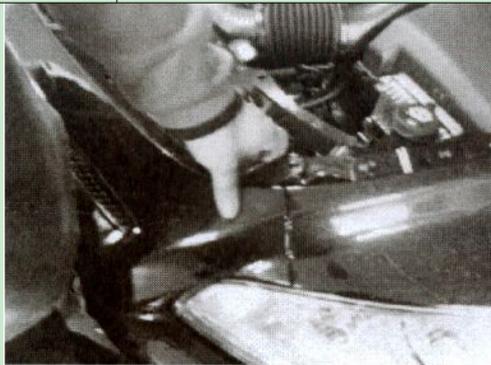


Figure 5



Figure 6

14	Using a flat blade screwdriver gently release all of the plastic tabs and remove the bumper insert. Figure 7 & 8
----	--

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03GFG81T	Application	<b>08~10 Chevy Malibu – Low Bumper Mesh Grille</b>
-------	------------	-------------	--

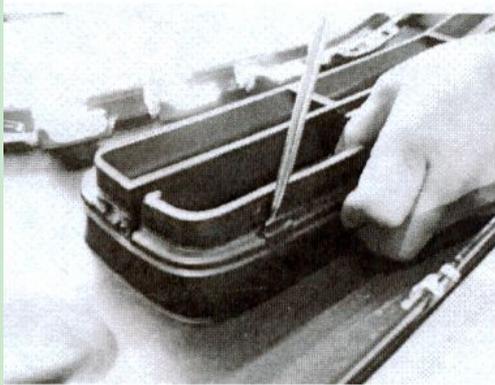


Figure 7

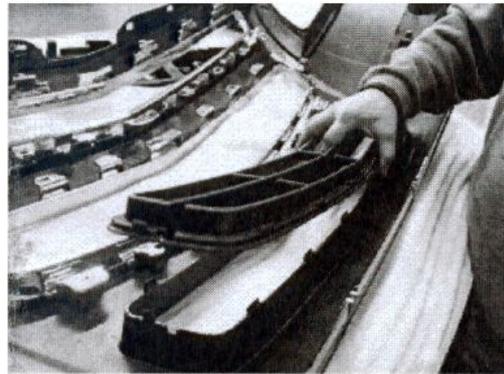
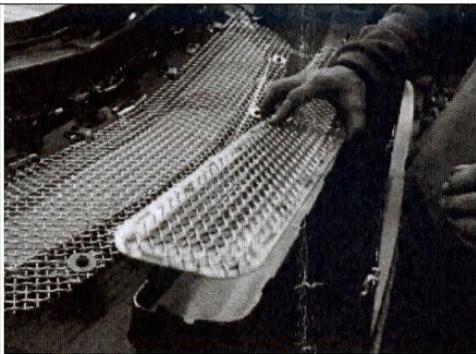


Figure 8

15	Place the wire mesh bumper grille into the factory opening with the factory clips lined up with the mounting holes on the wire mesh grille. Figure 9		Figure 9
16	With all of the clips lined up gently push down onto the wire mesh grille until all points are locked in.		
17	Reinstall the front fascia by reversing steps 2-10 and secure using all of the factory hardware.		
18	Installation completed!!!	N/A	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!